


## Getting to know your

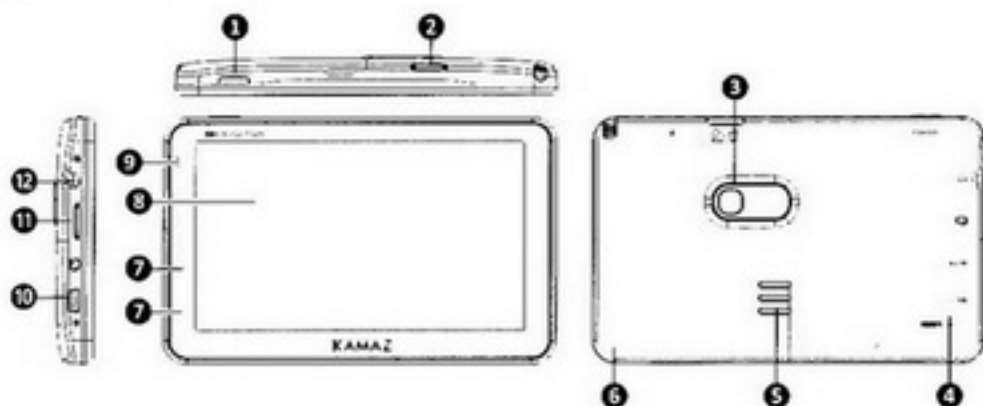

- |  |                                     |
|--|-------------------------------------|
| <b>1</b> Power button                    | <b>7</b> Microphone                 |
| <b>2</b> Memory card slot for recording* | <b>8</b> Touch screen               |
| <b>3</b> Camera lens                     | <b>9</b> Charge indicator           |
| <b>4</b> Reset button                    | <b>10</b> Mini-USB connector        |
| <b>5</b> Speaker                         | <b>11</b> Memory card slot for data |
| <b>6</b> Stylus                          | <b>12</b> Earphone jack             |

\*You should use separate MicroSD cards for recording and for regular data storage.

## Mounting and charging your in a vehicle

- Never mount your device where the driver's field of vision is blocked.
- If the windscreen is tinted with a reflective coating, it may be athermic and impact the GPS reception. In this instance, please mount your device where there is a "clear area" - usually just beneath the rear-view mirror.
- To protect your device against sudden surges in current, connect the in-car charger only after the car engine has been started.

---


## Inserting a memory card

**CAUTION:**

- Do not apply pressure to the centre of the memory card.
- Do not insert or remove the memory card when the device is turned on.

Hold the card (MicroSD) by the edges and gently insert it into the slot as shown in the illustration.

To remove a card, gently push the top edge of the card inwards to release it, and pull it out of the slot.

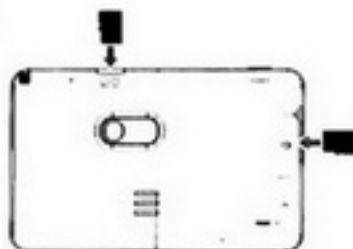















## Turning on and off

- For the initial start-up, press and hold the power button until the device turns on. When you turn on your device for the first time, follow the prompts to customise your device.  
*Note: The first time you use your , it may take several minutes to establish a GPS connection. When you have a GPS fix, you can start to use your to plan your trip.*
- While the device is turned ON, press the power button and it will enter a suspended state. To resume using the device, do one of the following:
  - Press the power button briefly.
  - Connect the device to an external power source.
- To turn OFF the device, press and hold the power button until the device shuts down.

## Main Menu



en

- |   |  |
|---|--|
|  Search for places, areas and streets to help plan your route.           |  Add or begin a planned trip with multiple waypoints. |
|  Display the Map screen.   |  Display the calculated route in simulation mode.     |
|  Access your saved locations.  |  Record GPS coordinates of a location or a journey.   |
|  Configure your <i>change</i> to "KAMAZ" navigation experience.          |  Select your navigation mode: Car or Truck.           |
|  Start recording the driving conditions or display the recording screen. |  Set or navigate to your home address.                |
|  Explore the area around your current position or destination.          |  Search for Points of Interest nearby.               |
- If the Main Menu button  appears in the top-right corner of a screen, tapping it returns to the Main Menu immediately.
  - If the Back button  appears in the top-left corner of a screen, tapping it returns to the previous screen.

## Viewing your route




- |          |  |          |  |
|----------|--|----------|--|
| <b>1</b> | <b>Direction and distance of next turn</b> | <b>4</b> | <b>Drive recording</b>   |
| <b>2</b> | <b>Current route</b>                       | <b>5</b> | <b>Distance and time information</b><br>Tap to display more information. |
| <b>3</b> | <b>Current position</b>                    | <b>6</b> | <b>Address bar</b>   |


Tap anywhere on the Map screen to bring up the Map options screen, which allows you to change the route-related configuration.

## Recording your driving


**Note:** Make sure of the correct date and time for your recordings; also make sure that the device has already gotten an GPS fix before you begin recording. The current date and time display at the bottom of the recording screen.

Make sure that the recording-specific MicroSD card (a Class 4 memory card with a 4GB~32GB capacity) has been inserted into the memory card slot for recording on the top of the device. When you use a new MicroSD card for recording for the first time, format the card on the device to make it recording-specific.


1. Tap  on the Main Menu or the Map screen.



2. Tap anywhere on the screen and tap .
3. Tap **Card Format > Execute**.


A recording can be triggered when:


- an AC power source is connected to the device that has been turned on.
- an event happens (such as sudden impact, high-speed driving, an overdone turn or an accidental crash) for the G sensor to prompt the device to start recording automatically.
- you tap  on the Main Menu or the Map screen.

The recording proceeds in a continuous mode and is divided into several temporary video clips (segments). The recording will not stop between video clips. If continuous recording is ongoing but there is not enough space on your memory card, new video clips will replace the old ones.

The  icon at the bottom of the screen indicates the recording mode, and the recording length (for example, 00:00:08) shows on the upper-right corner.

You can tap  /  to zoom in/out the image.

To return to the Main Menu or the Map screen without stopping the recording, tap anywhere on the screen and then tap . The recording will still continue in the background until you stop it.

To stop or restart the continuous recording, tap anywhere on the screen and then tap .