



GLOBAL5 CO., LTD.



Vehicle and Asset Tracking System

User Manual

Version 2.0



GLOBAL5 CO., LTD.

Global5 is a center for GPS technology, navigation systems, GPS for the survey, and e-map. Global5 was found from a group of professionals who have knowledge and experience of GPS system. to provide cutting edge technology to clients in the Global practice with friendly treat. Come visit us to try the GPS or exchange the Geographic Information System (GIS) knowledge or Update map and install GPS related Program. Global5 also offers display and demonstrate products to corporate customers as well. Please contact us at any time. Global5 Co. Ltd. is the sole distributor of GlobalSat Public Co., Ltd. in Thailand. Global5 commits to meet the business to individual consumer demands with state-of-the-art technology with service mind for the benefits to all sides.



Global5 Head Office





Taiwan Factory



Server

Operation of the GPS (Global Positioning System)

Satellite GPS (Navstar) consists of 24 satellites orbiting the earth 12, 600 mile over the ground. Time to orbit the earth is 12 hours. GPS works by receiving signals from the satellites. The satellite signal contains information indicating the position and time signals. The GPS receiver must process the difference of time in real time against the signal time and convert to distance between the current location to the reference ground locations of satellites. To locate a position precisely must have at least 4 satellites. The 3 satellites would be enough to locate any position if the earth is flat. But it is not so that the fourth satellite is needed to solve the uneven surface.

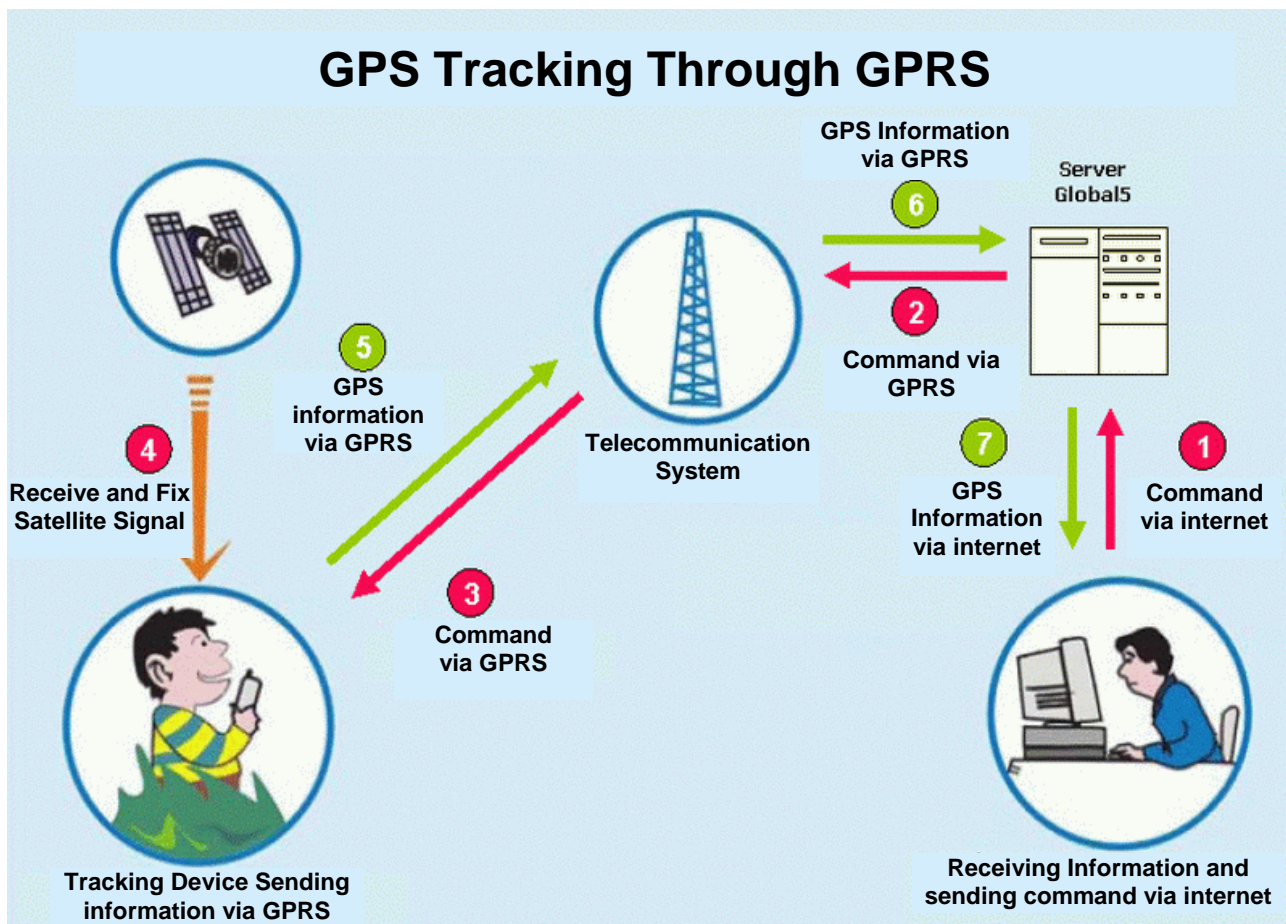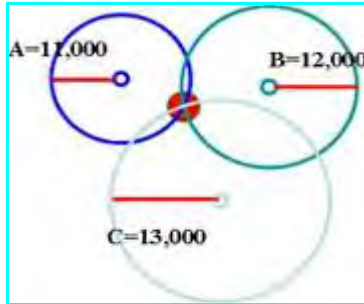

The Uses of Web Service

1. Enter to the website

Go to www.global5thailand.com and click **GPS Tracking**

2. Login

Type the Username, Password and select language. Then, click at Login

[Global5 HOME](#) [GPS PRODUCTS](#) [SUPPORT & FREE](#) [GPS KNOWLEDGE](#) [GPS TRACKING](#)

Please Login - GPS Tracking System | ระบบติดตาม GPS

DEMO TRACKING

SERVICE TEAM TRACK

- สำหรับท่านที่ใช้ SIM DTAC เดิมเงิน กรุณาเติมเงินก่อนครบกกำหนดและตรวจสอบ พร้อมยืนยันการใช้ package โทร 1678
- สำหรับท่านที่เข้าระบบเป็นครั้งแรก สามารถเปลี่ยน Password ได้ในหน้า Update profile
- กรุณารักษา Password ไว้เป็นความลับเพื่อป้องกันไม่ให้ผู้อื่นเข้ามาตรวจสอบข้อมูลได้ และควรมีการเปลี่ยน Password เป็นระยะๆ

Username :

demo

Password :

.....

Language :

English

Clear

Login

[คู่มือการใช้งานภาษาไทย](#) | [Web Service User Manual](#)

สินค้าที่เกี่ยวข้อง
Related Product

TR-600

TR-151

GTR-129

TR-206

TR-313

TR-203

GLOBAL5 CO., LTD.

Event & News

Show Map

Tracking System

Logistics System

Maintenance System

General Data

Manage User Group

Manage User

Contact Us

Logout

News & Events

15/7/2014 – Manage vehicle tyre

Menu > Logistics System > Manage Vehicle > Manage Vehicle Tyre

Manage Vehical Tyre Android Nexus 5



FRONT

Position	Serial No.	Brand	Size	Model	Start Date	Start Mile
P01	12008499	Bridgestone			2014-07-10	0
P02	24540999	Bridgestone			2014-07-10	0



บริษัท โกลบอลไฟว์ จำกัด 132/15,16 ซอยรามคำแหง 24 แขวง 34 เขตวัฒนา กรุงเทพมหานคร 10240
Tel: 02 719 0505, Fax: 02 719 0504 www.global5thailand.com

3. Monitoring the Vehicles

Click **show map** > click **Search**


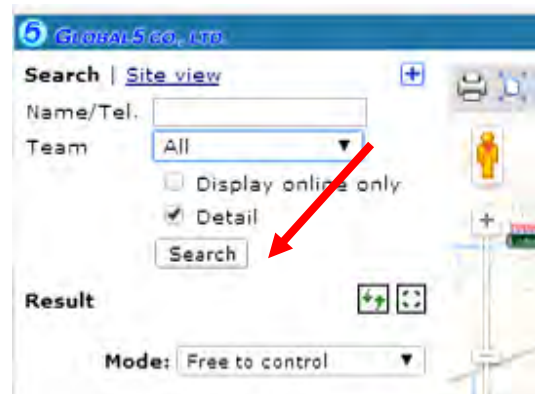
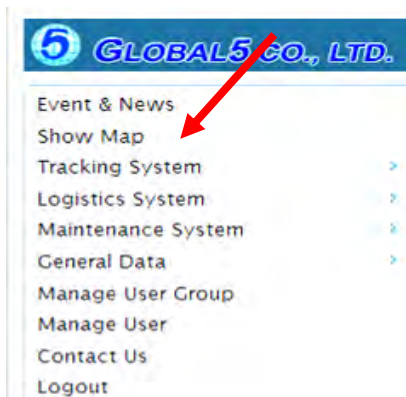



4. Select the Vehicle

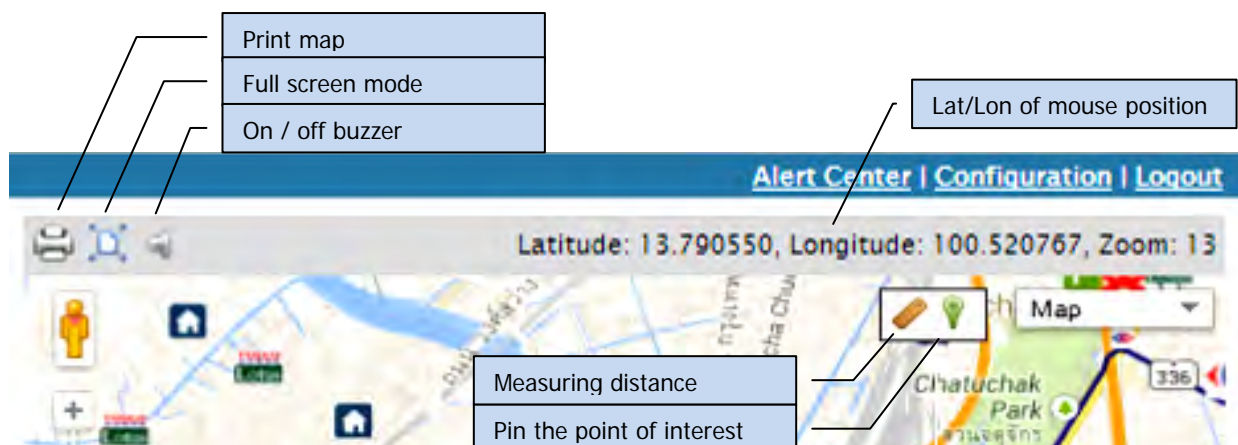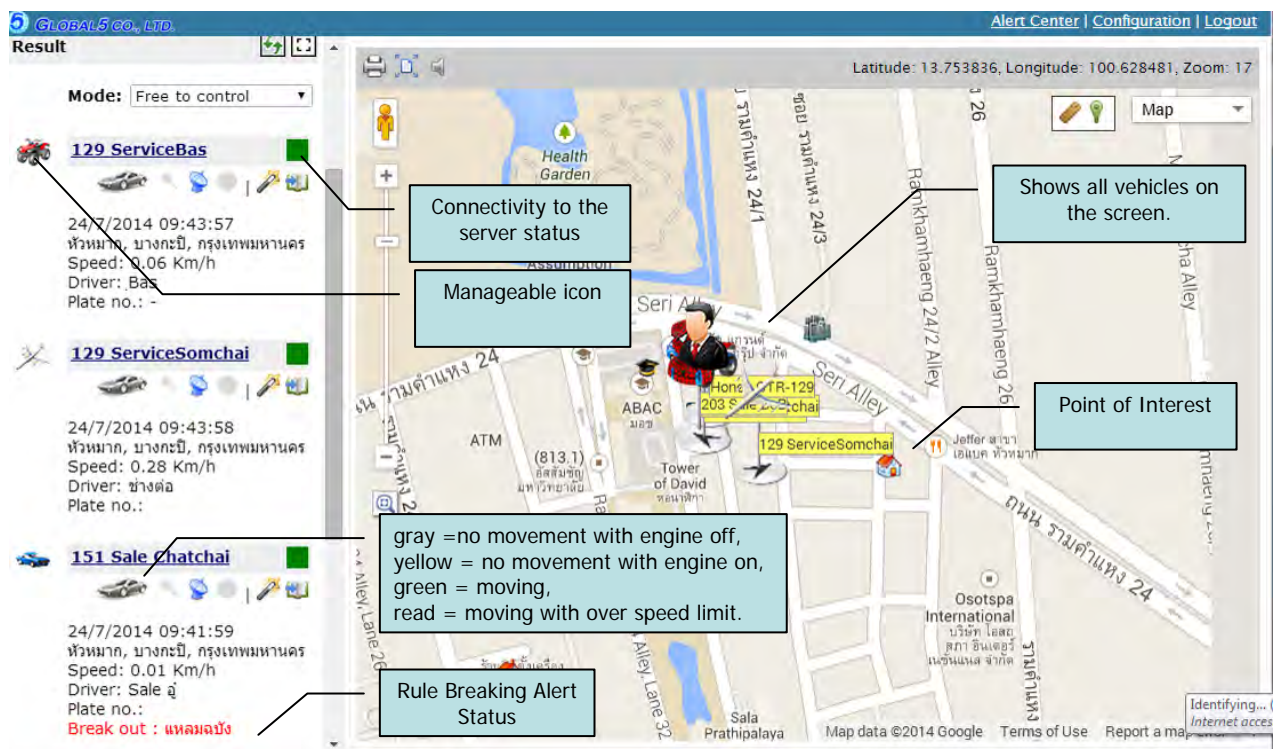

5. Individual Vehicle Monitoring

Click at **History** then select date and time

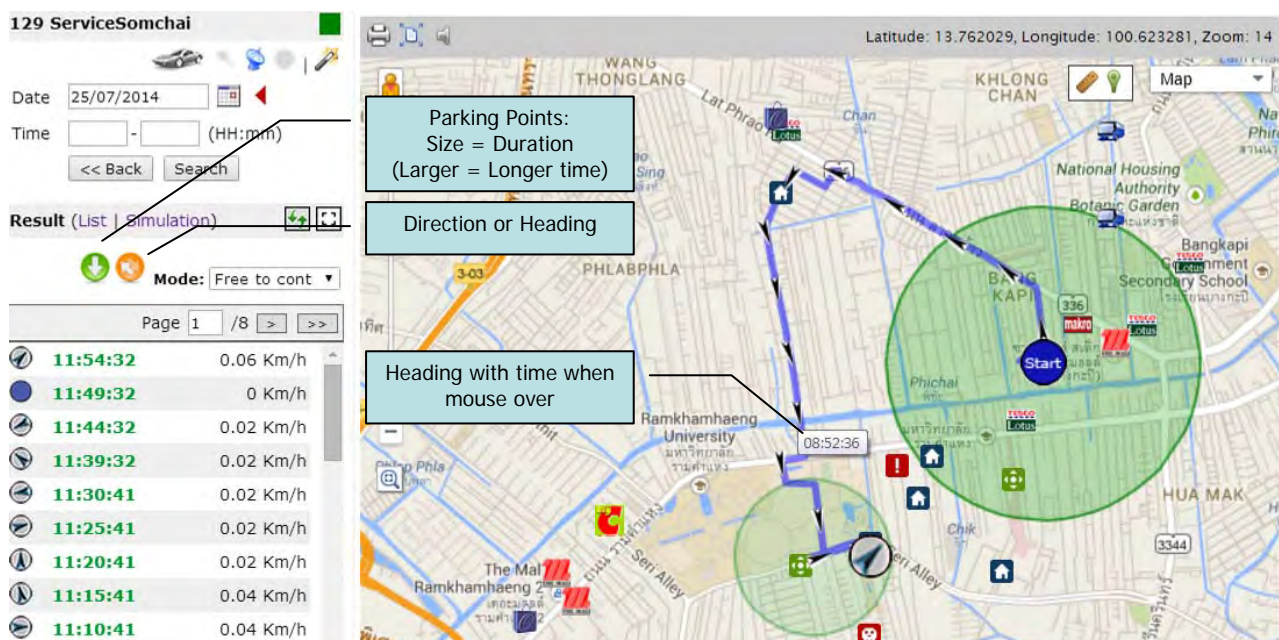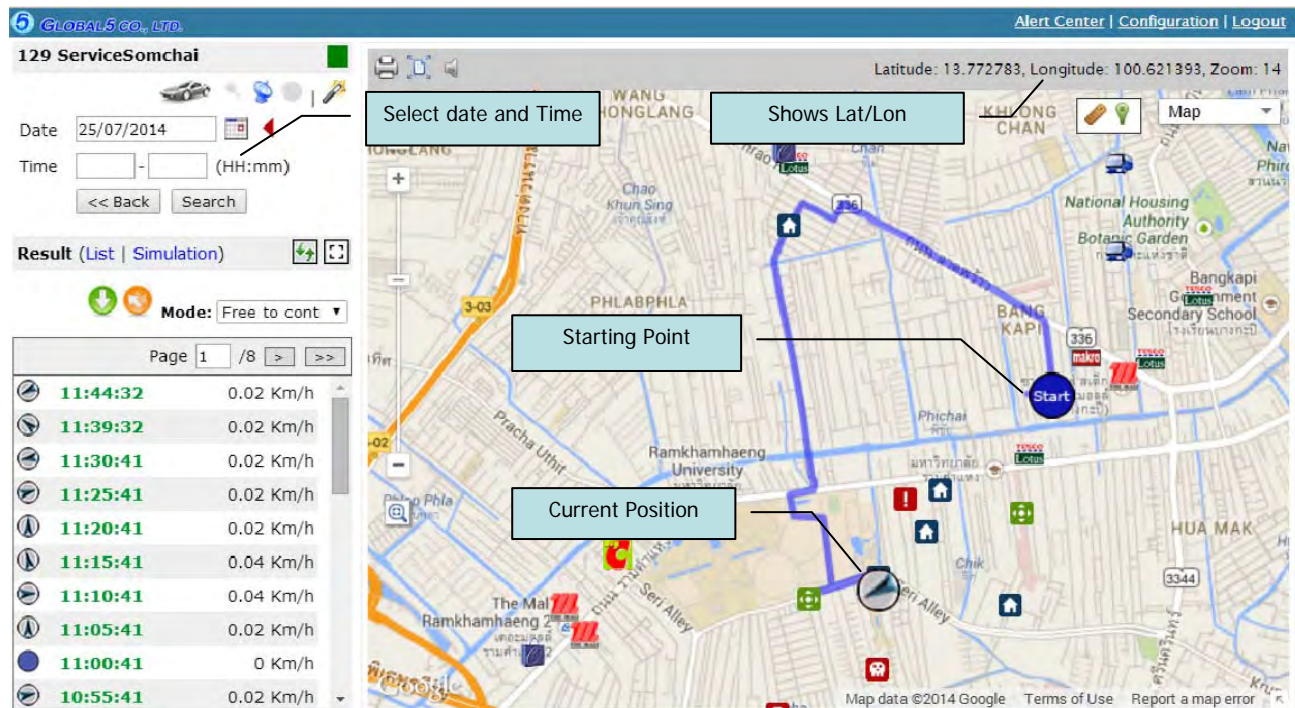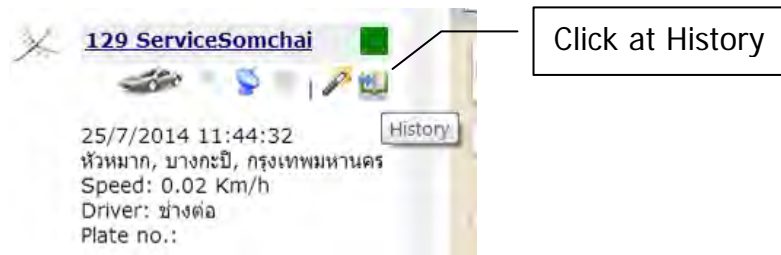

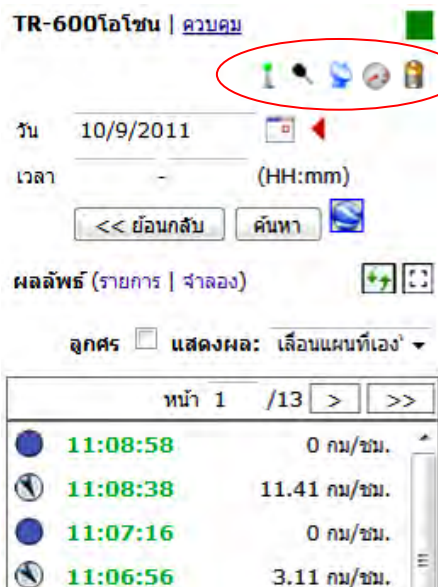

TR-600 status icon


Connect to the antenna. If grey, means antenna is damaged or disconnected.

Engine is on. If grey, means engine is off.

Received the satellite signal. If grey, lost satellite signal reception.

Motion Sensor activated. If grey, cannot detect movement.

Connect to external power source. If grey, power cord is disconnected.

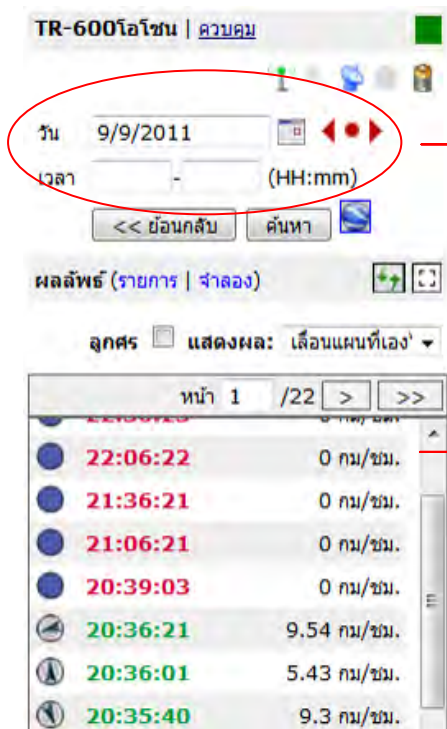


Connectivity to the server status:
Green means connect to the server.
Red means no connection.

Viewing the past records

- Select date or click the red arrow to forward or backward.
- Red dot for current date
- Type in start and end time for particular period


The records

- means no movement
- show heading
- Time in red means lost satellite signal reception
- Time in green means received the satellite signal

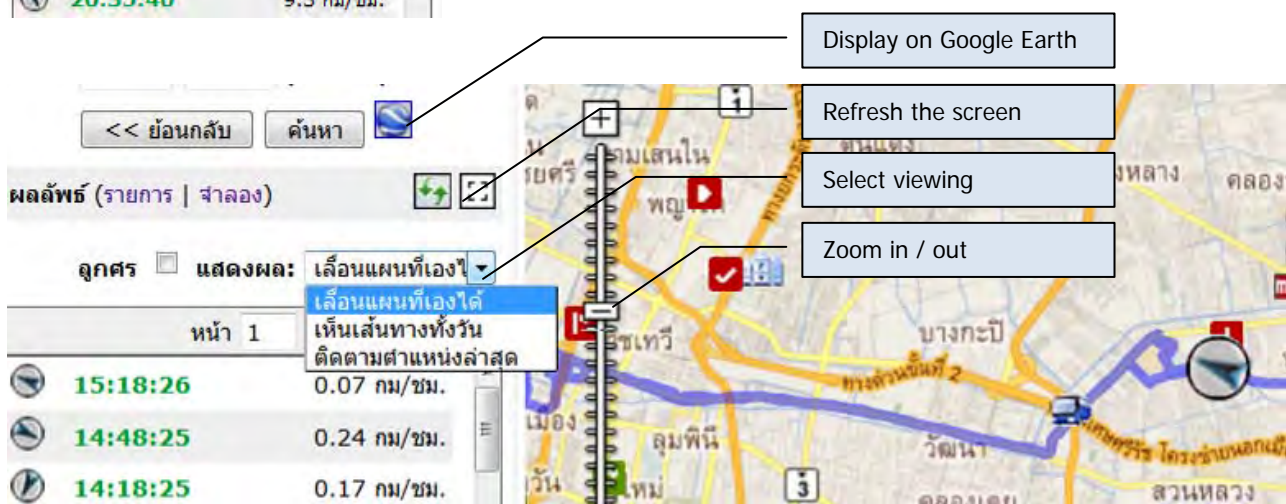


6. Simulation

Click **Simulation** to simulate the track and other parameters such as fuel level, engine status and etc.

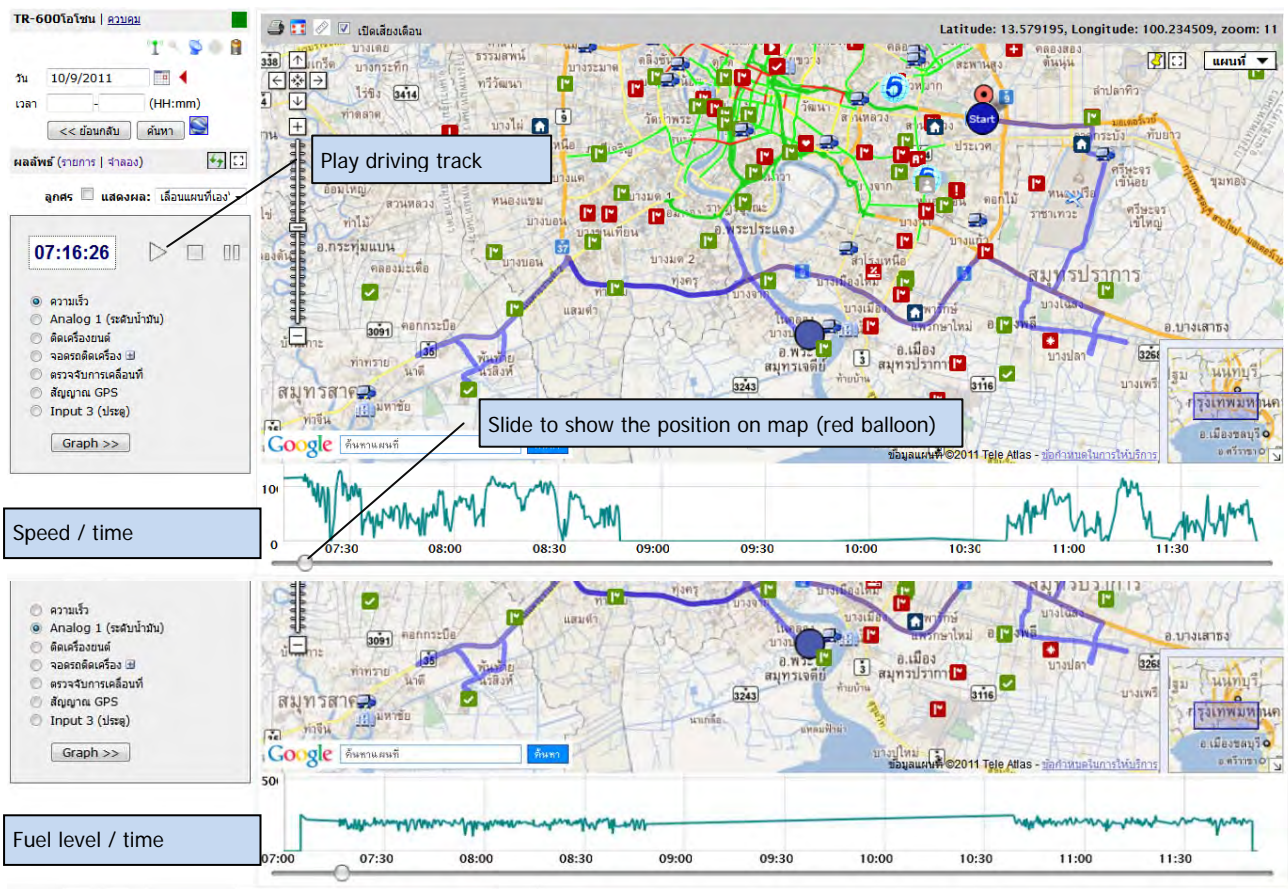


Click at and drag within the Graph area to zoom for the interesting period (Double Click for reset to full period)

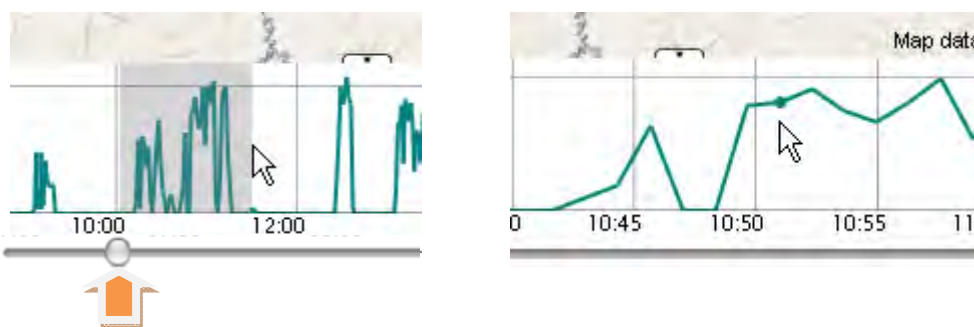

Click and drag the Slider bar to show position (recommend using with Firefox or Chrome for quick response)

7. Alert Center for monitoring events of yours choice

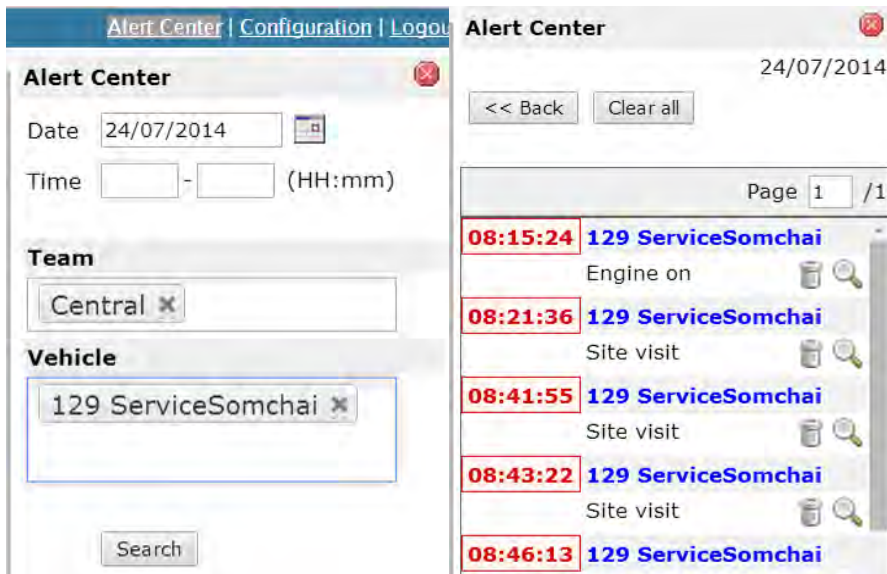


Search vehicles near the POI

Click [Site view](#), select pre-recorded POI from the list, type radius and click search or right click at any place of the map, select Site View.




8. Traffic Information

Right click and select **Show Traffic**. There will be the traffic information.

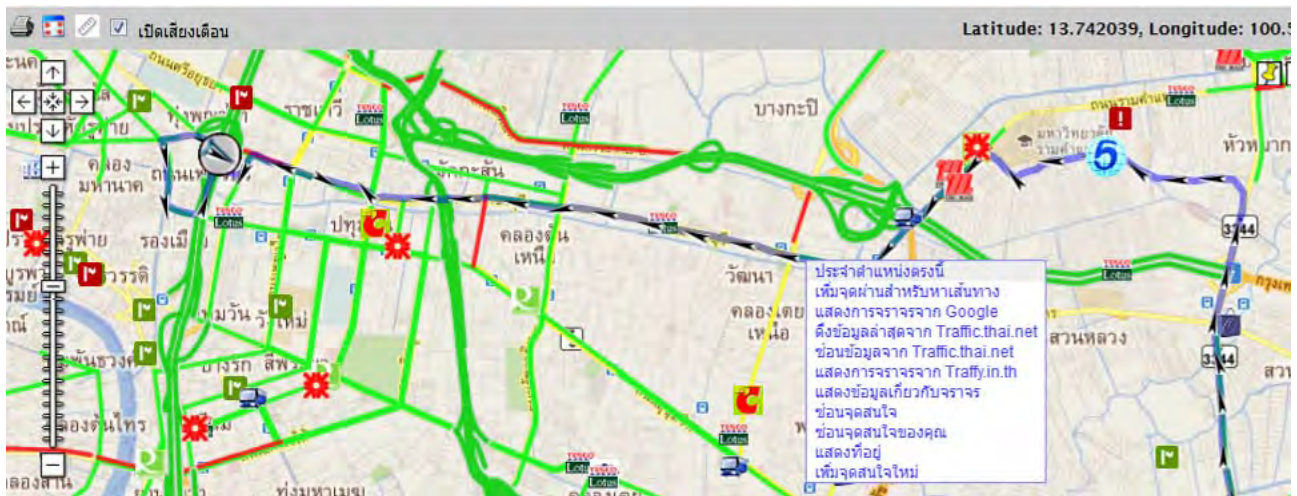

9. Route Creation

Right click and select **Add waypoint**, repeat the steps for destination. The route will be appeared on the map.

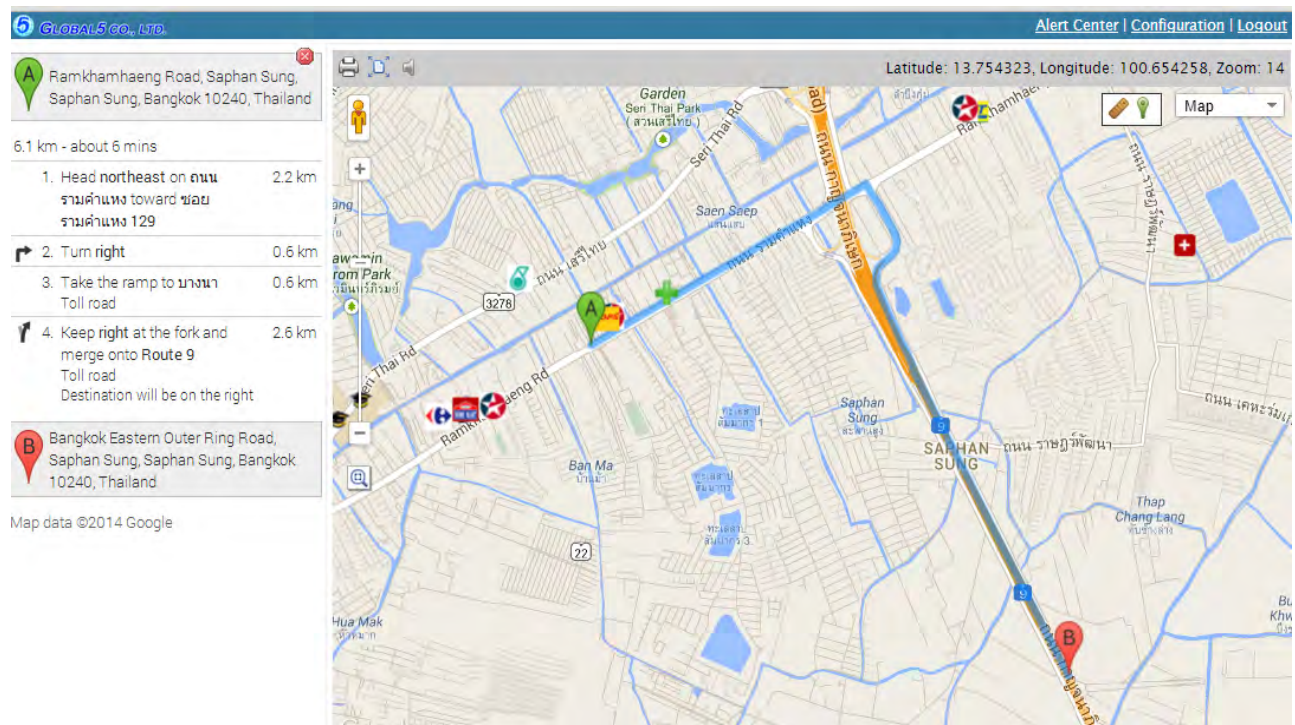

10. Satellite View

129 ServiceSomchai

Date: 25/07/2014

Time: (HH:mm)

<< Back Search

Result (List | Simulation)

Mode: Free to conti

Page 1 / 9

12:32:03	0.02 Km/h
12:22:03	0.04 Km/h
12:17:03	0 Km/h
12:16:33	0 Km/h
12:16:25	0.02 Km/h
12:16:02	7.24 Km/h
12:15:46	23 Km/h
12:15:35	7.72 Km/h
12:15:05	18.43 Km/h
12:15:02	11.83 Km/h
12:14:57	21.45 Km/h
12:14:22	11.93 Km/h
12:14:15	21.52 Km/h

[Map](#) | [Satellite](#) | [Terrain](#)

Latitude: 13.759658, Longitude: 100.659494, Zoom: 14

Satellite

11. Generate Report

Click at [Configuration](#) on the top right corner (at map view) or at main menu column > click [Generate Report](#) > select the vehicle > click at [Summary Report](#) or Report for selected car on the lower right corner.

Account owner

- Event & News
- Show Map
- Manage Team
- Manage Vehicle
- SMS Credit
- Update Profile
- Manage Custom POI
- Schedule Job
- Manage Area/Route
- Generate Report
- Manage User Group
- Manage User
- Contact Us
- User Manual
- Logout

Generate Report

Select Team: All team


Name	Driver name	Plate no.	
Sudsut 77			Summary Report
<input checked="" type="checkbox"/> TR-600 โฉน	Salesหมื่นควาย	ภท9999	Summary Report
<input type="checkbox"/> 102			Summary Report
<input type="checkbox"/> 151 SalesBee Bee	ณัฐพัชร (ผู้ชาย หล่นล้า)	สด 212 224 236 248	Summary Report
<input type="checkbox"/> TR-203			Summary Report
<input type="checkbox"/> 203 SalesMax	ธนัช	ลาย 4 สีแดง	Summary Report
<input type="checkbox"/> Test TR-600			Summary Report
<input type="checkbox"/> Test TR-151			Summary Report
<input type="checkbox"/> 203 Service			Summary Report

[Report for selected car >>](#)


Summary Report

Summary Report [10/9/2011]


Name	TR-600 โอลิมปัส	Driver	Sales พิเศษ
Plate no.	ภท9999	Team	Central
Total distance	246.33 Km	Maximum speed	131.92 Km/h
Average speed	59.90 Km/h		

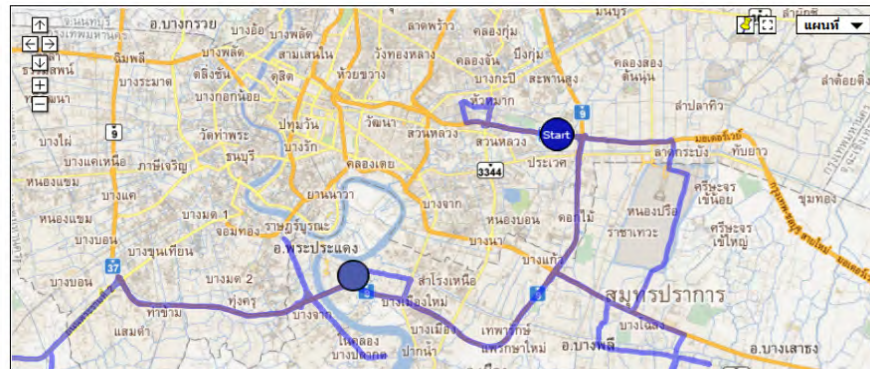


Speed

 


Analog 1 (ระดับน้ำมัน)

 

Engine on/off

 

Park with Engine on

 

Site Visiting

Site radius : 100 M.

Departure	Time	Arrive	Time	Traveling Duration (Min)	Visiting Duration (Min)	Average Speed (Km/h)	Traveling Distance (Km)
View Start	07:16:26	APOLLO TEC TRADING CO.,LTD	08:48:00 - 10:39:40	92	112	65.28	99.62
View APOLLO TEC TRADING CO.,LTD	10:40:01	บริษัท โกลบอลไฟร์ จำกัด(สำนักงานใหญ่)	15:06:43 - 15:37:07	267	30	23.35	103.80
View บริษัท โกลบอลไฟร์ จำกัด(สำนักงานใหญ่)	15:37:27	End	16:33:40 - 16:33:40	56	0	45.15	42.30

Over Speed Limit


Speed Limit : 100 Km/h, Moving Average : 4

Time	Area	Duration (Min)	Average Speed (Km/h)	Traveling Distance (Km)
View 07:16:59 - 07:19:19	ประเวศ, ประเวศ, กรุงเทพมหานคร	2	104.26	4.05
View 07:26:34 - 07:28:18	หนองปรือ, บางพลี, สมุทรปราการ	2	114.72	3.31
View 07:28:57 - 07:28:57	บางโพง, บางพลี, สมุทรปราการ	0	95.79	0.00
View 08:10:06 - 08:15:30	บางแก้ว, บางพลี, สมุทรปราการ	5	105.67	9.51
View 08:15:53 - 08:17:54	บางแก้ว, บางพลี, สมุทรปราการ	1	107.70	1.73

Click View to show position on the map.

Over Speed Limit	
Time	Area
View 12:58:50 - 12:59:39	หัวหมาก, 2
View 13:11:40 - 13:11:51	บางคอแหลม

click View

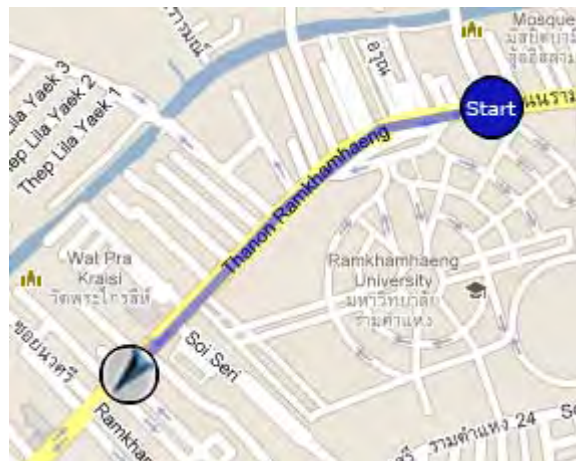


Over speed location



In / out of restricted area



Track from site to site.

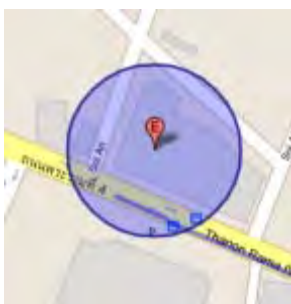

Manageable Site radius

Report for Selected Car

Select date > set other parameters > select report type > click view in web page or Export to Excel



Account owner

Event & News
Show Map
Manage Team
Manage Vehicle
SMS Credit
Update Profile
Manage Custom POI
Schedule Job
Manage Area /Route
Generate Report
Manage User Group
Manage User
Contact Us
User Manual
Logout

Report Parameters

- Select period of report up to 7 days
- Choose to display report in web page or export to Excel, if supported

Select date

Start time : 14/9/2011 
End time : 14/9/2011 
(dd/mm/yyyy hh:mm)

General setting

Moving Average	4	
Max Speed	100	Km/h
Max Idle	60	Minutes
Site Radius	100	Meter
GPS Signal weak longer than	10	Minutes
Disconnect longer than	10	Minutes

Park with engine on

Park longer than	15	Minutes
Move not more than	100	Meter

Select report type

- ☒ Tracking Report on map (Display first 1 day)
- ☐ Daily Speeding Graph (Display first 1 day)
- ☐ Position Detail Report
- ☐ Site Visiting Report
- ☐ Speed Limit Report
- ☐ No Movement Report
- ☐ Park with engine on Report
- ☐ GPS Weak Signal Report
- ☐ Offline Report
- ☐ Area / Route Restriction Report

[View in web page](#)

[Export to Excel](#)

Example of each report

Position Tracking Report									
Date: 11 July 2008 - 11 July 2008									
Vehicle	Date	Time	Area	Nearest POI	Latitude	Longitude	Altitude	Speed	Distance
นครศรีธรรมราช	11 July 2008	00:00:52	ทับสะแก (thap sakae)	Unknown	11.447700	99.566000	6.10	88.04	0.00
นครศรีธรรมราช	11 July 2008	00:02:01	ทับสะแก (thap sakae)	Unknown	11.459400	99.576400	11.10	88.51	1.73
นครศรีธรรมราช	11 July 2008	00:03:10	ทับสะแก (thap sakae)	Unknown	11.470000	99.587700	14.10	92.19	3.43
นครศรีธรรมราช	11 July 2008	00:04:20	ทับสะแก (thap sakae)	Unknown	11.480000	99.598300	27.00	56.58	5.04

นครศรีธรรมราช	11 July 2008	23:56:03	ปราณบุรี (pran buri)	Unknown	12.457800	99.899900	15.60	83.04	540.15
นครศรีธรรมราช	11 July 2008	23:57:00	รายงานสรุป: ระยะทางรวม 544.93 km ความเร็วสูงสุด 97.49 km/hrs ไม่มีการออกนอกพื้นที่						
นครศรีธรรมราช	11 July 2008	23:58:22	ปราณบุรี (pran buri)	Unknown	12.432000	99.914800	16.40	83.91	543.45
นครศรีธรรมราช	11 July 2008	23:59:30	ปราณบุรี (pran buri)	Unknown	12.421600	99.923300	2.70	69.06	544.93
รายงานสรุป: ระยะทางรวม 544.93 km ความเร็วสูงสุด 97.49 km/hrs ไม่มีการออกนอกพื้นที่									
Done									

Site Visiting Report						
Date: 12 January 2010 - 12 January 2010						
Vehicle	Date	Time	Visiting Site	Visiting Duration (Min)	Distance to site (Km)	
รถปิคอัพ	12 January 2010	01:04:24	สำนักงานโครงการวิจัย	462	11,132.01	
รถปิคอัพ	12 January 2010	09:06:44	GLOBAL Head Office	18	11,131.72	
รถปิคอัพ	12 January 2010	09:24:23	GLOBAL Head Office	1	1.16	
รถปิคอัพ	12 January 2010	10:33:26	บริษัท ทรานส์คอม จำกัด	62	44.01	
รถปิคอัพ	12 January 2010	11:36:07	บริษัท ทรานส์คอม จำกัด	2	1.02	
รถปิคอัพ	12 January 2010	12:13:46	GLOBAL Head Office	337	22.47	
รถปิคอัพ	12 January 2010	18:09:54	GLOBAL Head Office	1	1.16	
รถปิคอัพ	12 January 2010	18:15:21	GLOBAL Head Office	1	1.06	
รถปิคอัพ	12 January 2010	18:15:27	GLOBAL Head Office	1	0.78	
รถปิคอัพ	12 January 2010	18:18:44	สำนักงานโครงการวิจัย	1	1.94	
รถปิคอัพ	12 January 2010	18:18:47	สำนักงานโครงการวิจัย	2	0.87	
รถปิคอัพ	12 January 2010	18:28:20	สำนักงานโครงการวิจัย	1	0.83	
รถปิคอัพ	12 January 2010	18:28:24	สำนักงานโครงการวิจัย	153	0.93	
Total:					22,340.95	

Speed Limit Report

Speed Limit : 100Km/h, Moving Average : 4 | Date: 10 September 2011 - 10 September 2011

Start Time	End Time	Area	Duration (Min)	Average Speed (Km/h)	Traveling Distance (Km)
TR-600 โอลิมปิก					
View 10 September 2011 07:16:59	10 September 2011 07:19:19	ประเทศ, ประเทศ, กรุงเทพมหานคร	2	104.26	4.05
View 10 September 2011 07:26:34	10 September 2011 07:28:18	หนองปรือ, บางพลี, สมุทรปราการ	2	114.72	3.31
View 10 September 2011 07:28:57	10 September 2011 07:28:57	บางโกลง, บางพลี, สมุทรปราการ	0	95.79	0.00
View 10 September 2011 08:10:06	10 September 2011 08:15:30	บางแก้ว, บางพลี, สมุทรปราการ	5	105.67	9.51
View 10 September 2011 08:16:53	10 September 2011 08:17:54	บางด้วน, เมืองสมุทรปราการ, สมุทรปราการ	1	102.29	1.73
View 10 September 2011 08:24:44	10 September 2011 08:25:25	ทุ่งครุ, ทุ่งครุ, กรุงเทพมหานคร	1	101.06	1.15
View 10 September 2011 08:26:45	10 September 2011 08:27:05	ท่าข้าม, บางขุนเทียน, กรุงเทพมหานคร	0	96.93	0.54
View 10 September 2011 08:28:07	10 September 2011 08:28:47	แสมดำ, บางขุนเทียน, กรุงเทพมหานคร	1	101.05	1.12
View 10 September 2011 11:12:55	10 September 2011 11:14:15	แสมดำ, บางขุนเทียน, กรุงเทพมหานคร	1	108.45	2.41
View 10 September 2011 11:15:01	10 September 2011 11:15:43	บางนา, บางนา, กรุงเทพมหานคร	1	100.21	1.14

No Movement Report

More than 10 minutes | Date: 12 January 2010 - 12 January 2010


Vehicle	Date	Time	Area	Nearest POI	Duration (Min)
(O) 151 Sale Test 2	12 January 2010	10:52:28	บางเสาธง, กรุงเทพมหานคร, สมุทรปราการ	-	241
(O) 151 Sale Test 2	12 January 2010	17:57:23	บางเสาธง, กรุงเทพมหานคร, สมุทรปราการ	-	77
(O) 151 Sale Test 2	12 January 2010	19:17:26	บางเสาธง, กรุงเทพมหานคร, สมุทรปราการ	นิคมอุตสาหกรรม 2002	18
(O) 151 Sale Test 2	12 January 2010	19:41:18	บางโกลง, บางพลี, สมุทรปราการ	-	11
(O) 151 Sale Test 2	12 January 2010	22:18:29	ห้วยขวาง, บางกะปิ, กรุงเทพมหานคร	-	13

รายงานสรุป: มีการจอดนานที่สุด 241 นาที

Area / Route Restriction Report

Date: 23 July 2014 - 23 July 2014

Start Time	End Time	Area / Route	Duration (Min)	Traveling Distance (Km)
151 Sale Chatchai				
View 23 July 2014 00:26:44	23 July 2014 16:25:36	OUT : แพลมมั่ง	959	0.95

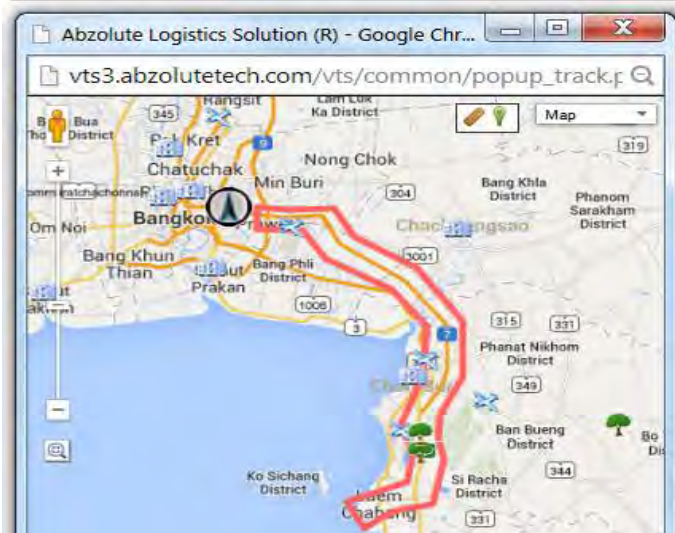

12. Configuration

Click at **Configuration** on the top right corner (at map view) or at main menu column click manage vehicle

Account owner
Event & News
Show Map
Manage Team
Manage Vehicle
SMS Credit
Update Profile
Manage Custom POI
Schedule Job
Manage Area/Route
Generate Report
Manage User Group

Manage Vehicle
Select Team: All team ▼
[Manage Team](#) | [Add new vehicle](#)

Display name	GPS Model	IMEI	Expire	Package	Credit	History
Sudsut 77	TR-151		02/12/2011	Corporate Package : Active	0	90 Days
Edit I/O Config Manage Rule Change Icon Delete Control Import Data Undo import						
TR-600ไอโฟน	TR-600		03/07/2012	Corporate Package : Active	0	90 Days
Edit I/O Config Manage Rule Change Icon Delete Control Import Data Undo import						

Click at Edit to modify the content.

Note: Alteration of IMEI may stop tracking information to show on the website. Normally, Global5 has already set all necessary parameters for users.

Manage Vehicle
Show Map
Manage Team
Manage Vehicle
SMS Credit
Update Profile
Manage Custom POI
Schedule Job
Manage Area/Route
Generate Report
Manage User Group
Manage User
Contact Us
User Manual
Logout

Model: TR-600 ▼
IMEI:
Username: ozone
Password: 1234
Phone:
Display name: TR-600ไอโฟน
Driver name: Salesหมีตัวขาว
Plate no.: กท9999
Comment:

Team: Central ▼
Max speed : 120 Km./h
Clock Reference: Use GPS clock *
Ping Interval 240 Second *
Ping regularly can prevent GPRS connection close after long idle
(Enter 0 to disable)

(*) will take effect on the next time device connect to server

Save


Change Car Icon

Click at Change Icon

Manage Vehicle
SMS Credit
Update Profile
Manage Custom POI
Schedule Job

Display name	GPS Model	IMEI	Expire	Package	Credit	History
Sudsut 77	TR-151		02/12/2011	Corporate Package : Active	0	90 Days
Edit I/O Config Manage Rule Change Icon Delete Control Import Data Undo import						

13. Update custom POI

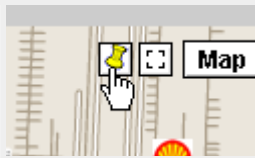

save POI by clicking at marker icon



the marker will be appeared on the map, move the marker to the desired position and click at Save POI



The system will confirm your action and show it on the map.

Manage Custom POI

User may add more information and picture to the POI by clicking at Manage Custom POI and Edit.

Account owner

Event & News

Show Map

Manage Team

Manage Vehicle

SMS Credit

Update Profile

Manage Custom POI

Schedule Job

Manage Area/Route

Generate Report

Manage custom POI

Name: [Add new POI](#)

POI Name	Latitude	Longitude	Visible?	Icon
Max House	8.43117791044	98.5190176964	Yes	View Move Edit Icon Delete
ตัวแทนขาย พืชยากลาง	12.936003	100.88885	Yes	View Move Edit Icon Delete
โรงงาน บริษัท สยามเคียววะ	13.2067702679	101.168680787	Yes	View Move Edit Icon Delete

Update custom POI

POI Name

Latitude (hh.hhhhh) [Converter](#)


Longitude (hh.hhhhh) [Converter](#)

Detail


Picture

* Recommended size 128x128

Visible:

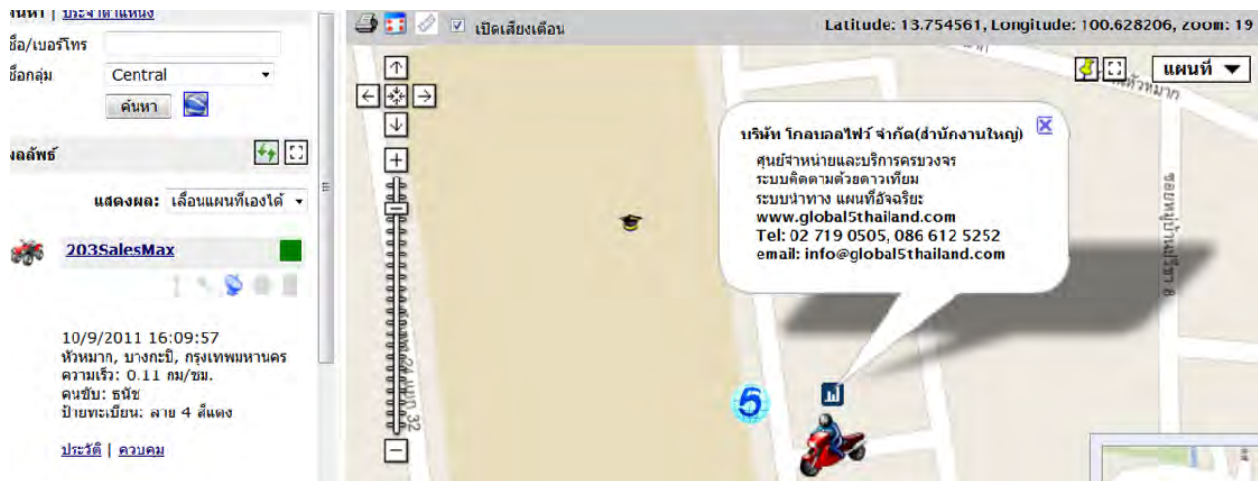


14. Manage allowed Area / Route

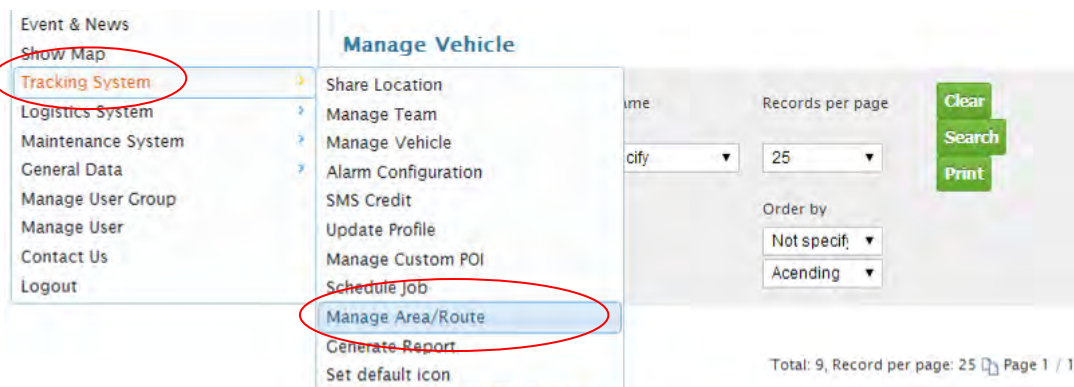


Add New Area | Add New Route

Name	Type	
out area test	Area	View Edit Delete
แหลมฉบัง	Area	View Edit Delete
บุรีรัมย์	Area	View Edit Delete
Global5	Area	View Edit Delete
111	Route	View Edit Delete

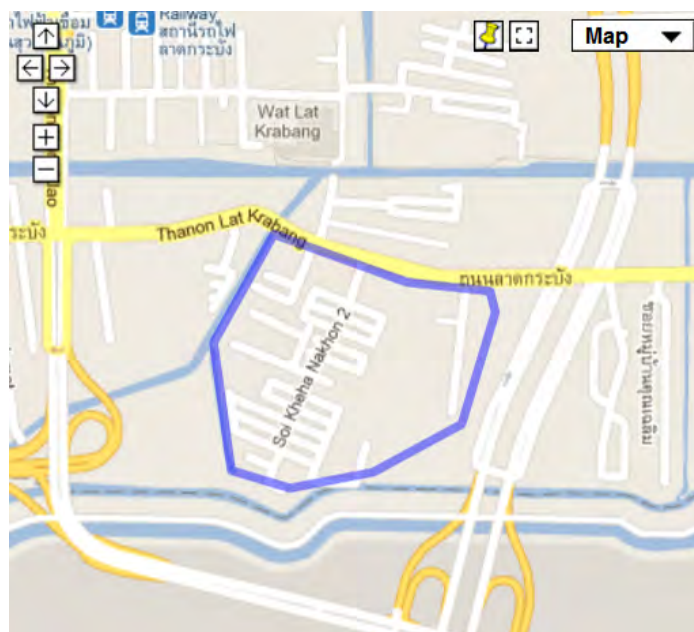

Add New Route

- Click on map to draw area or route. To end route click on the last point again, to end area click on the first point
- To edit, just move the point. Then click save to finish

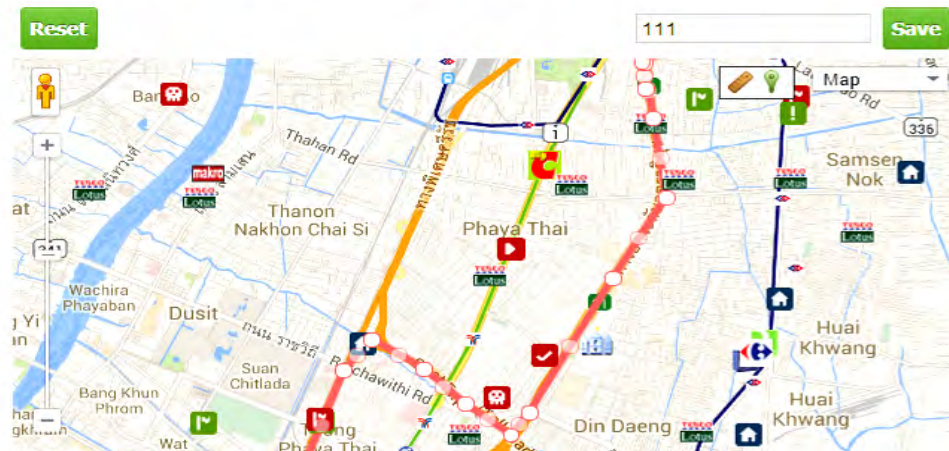

Then, go to Tracking System > Manage Vehicle > Select Manage Rule for each vehicle.

Event & News
Show Map
Tracking System
Logistics System
Maintenance System
General Data
Manage User Group
Manage User
Contact Us
Logout

Manage Vehicle

- Share Location
- Manage Team
- Manage Vehicle**
- Alarm Configuration
- SMS Credit
- Update Profile
- Manage Custom POI
- Schedule Job
- Manage Area/Route
- Generate Report
- Set default icon

Name:
Records per page:
Order by:

Clear
Search
Print

Total: 9, Record per page: 25 Page 1 / 1

Display name	GPS Model	IMEI	Phone	Expire	Package	History
203 Sale RoR	TP-203	011412000051221	0867841112	For Demo	Active	90 Days
Edit I/O Config Manage Rule Change Icon Control Control History Import Data Undo import						
151 Sale Chatchai	TR-151	353681043751213	0819089174	For Demo	Active	90 Days
Edit I/O Config Manage Rule Change Icon Control Control History Import Data Undo import						
Manager Card Reader	TP-600	1535690446065	08	For Demo	Active	90 Days

Add New Vehicle Rule

Type:

Area / Route:

Start Time: (HH:mm:ss)

End Time: (HH:mm:ss)

Enable:

Tolerance ±: M.

* Apply to route only

Effective Days: ☒ Sunday ☒ Monday ☒ Tuesday ☒ Wednesday ☒ Thursday ☒ Friday ☒ Saturday

15. Control the Tracking Unit from the Website



The new pop up window will appear. Select the desire item. To send SMS command from website requires purchasing SMS credit. User may view the command code by clicking at Preview GPRS command.

Send Control Command : TR-600

- To send command via GPRS, this can be done if GPS device is connected with server and has status active.
- Available credit for sending SMS : 0 Credit

☒ **Immediate report**

Report position immediately and then stop

☐ **Stop connect and set period report**

Continuously report position and close connection after sent. For interval

1 minutes

☐ **Voice monitor**

Listen to what's happening by making device call to phone number

☐ **Custom command**

Preview GPRS command

Send GPRS command

Send SMS Command

** Not enough credit to send SMS

Preview SMS command

Send SMS command

16. Setting Schedule Job

The schedule job setting for tracking unit from the website is free. User may set the tracking unit to work in Park mode during the night and back to normal mode in the morning. For example; Start Parking Mode Click: Schedule Job > select Run time > Action > Build Command > Select Vehicle > Select and generate command > save. Repeat steps to set for start normal mode.

Corporate Tracking

Event & News
Show Map
Show Map (Snapshot)
Manage Team
Manage Vehicle
SMS Credit
Update Profile
Manage Custom POI
Schedule Job
Manage Allowed Area
Generate Report
Contact Us
User Manual
Logout

Manage Schedule (บริหารจัดการตารางงาน)

Schedule Name:
Enable:

[Run time](#) | [Action](#) | [Note](#)

Time:

☒ **DAILY**
☐ **ONE TIME**

☐ **WEEKLY**
☐ Sunday ☐ Monday ☐ Tuesday ☐ Wednesday
☐ Thursday ☐ Friday ☐ Saturday
☐ **MONTHLY**
☐ 1 ☐ 2 ☐ 3 ☐ 4 ☐ 5 ☐ 6 ☐ 7
☐ 8 ☐ 9 ☐ 10 ☐ 11 ☐ 12 ☐ 13 ☐ 14
☐ 15 ☐ 16 ☐ 17 ☐ 18 ☐ 19 ☐ 20 ☐ 21
☐ 22 ☐ 23 ☐ 24 ☐ 25 ☐ 26 ☐ 27 ☐ 28
☐ 29 ☐ 30 ☐ 31

Manage Schedule

Name:
Enable:

[Run time](#) | [Action](#) | [Remark](#)

Send SMS / Send Command

☒ **Send GPRS Command (Build command)**
Vehicle:
Wait Period: Hour
To send GPRS command, GPS Device must be connecting with the server at specific time. If not, command will be hold for "Wait Period" before expired.

☐ **Send SMS Message/ Command (Build command)**
Phone:

Command / Message

Check Incoming Data
☐ **Check Incoming Data (Select Vehicle)**
Check if position data is not yet received or not. If not, send email or SMS
Vehicle:
Email:
SMS:

Model	Vehicle name	Team	
TR-151	Sudsut 77	On Test	Choose
TR-600	TR-600Taโขນ	Central	Choose
TR-102	102	On Test	Choose
TR-151	151SalesBee Bee	On Test	Choose
TR-203	TR-203	On Test	Choose
TR-203	203SalesMax	Central	Choose

☒ **Immediate report**
Report position immediately and then stop
☐ **Period report**
Continuously report position and keep connected. For interval minutes
☐ **Stop connect and set period report**
Continuously report position and close connection after sent. For interval minutes
☐ **Voice monitor**
Listen to what's happening by making device call to phone number
☒ **Start parking mode**
If no movement or vibration report position every minutes
If moving or vibrating report position every minutes
Sensitivity level, less value means more sensitive (1-255)
☐ **Stop parking mode**
And back to the previous mode
☐ **Custom command**

17. Sub Account and Privilege Setting

Sub account is for setting privilege of each user to view or control of website. To set the sub account, click at Manage User Group > Add new Group > Set Privilege > Add new user

The screenshot shows the 'Manage User Group' interface. On the left is a sidebar menu with 'Manage User Group' circled in red. The main content area has a table with the following data:

Group Name	Member count	
Central	2	Member Edit & Set Privilege Privilege on Team
test2	2	Member Edit & Set Privilege Privilege on Team

Below the table is a note: 'Can delete blank group only'. An arrow points from the 'Edit & Set Privilege' link for 'test2' to a modal window titled 'Edit User Group'. The modal contains:

- Group Name: test2
- Member**
 - bb [bb]
 - max [max]
- Privilege**
 - ☐ Have all privileges
 - ☒ Have speific privileges
 - ☒ Map
 - ☒ Map - History
 - ☒ Map - SOS
 - ☐ Manage Team

Add New User

The screenshot shows the 'Add New User' interface. The sidebar menu on the left has 'Manage User' circled in red. The main form contains the following fields:

- Full Name:
- Username:
- Password:
- Group:
-

Login

Go to <http://vts2.abzolutetech.com/corp> > click " Sub account" > type sub account @ main account > click Login

The screenshot shows the 'Login - Corporate Tracking' interface. It includes a 'Login' button, two links: 'Sign up for a new account' and 'Forget password', and a form with the following fields:

- Username: [Sub account](#)
- Password:
- Language:
-

18. Tracking on PDA or Smart Phone

Search for “iAbzolute”

iPhone / iPad: App Store



Android: Google Play



Type Username / pass word > Login

Choices for:

- Overview Team
- History Vehicle
- Save POI

